

# Frommelt


## Safety Products

### SAF-T-CELL INSTALLATION INSTRUCTIONS

1. Remove all components from shipping containers and verify with the packing list.
2. Place the vertical support columns and couplers near the positions where they will be located.
3. Attach corresponding couplers to the vertical support columns before placing them in the upright position. Use the bolts, lock washers and nuts provided to secure the couplers.
4. Starting at one corner or end, secure the vertical support column to the floor. (Hardware not provided.)
5. Locate the appropriate horizontal rail. With an assistant, slide the rail into the first coupler and finger tighten set screw. Place next vertical column upright and carefully slide rail into the coupler. Finger tighten set screw. Secure the vertical column to floor. Proceed in this manner until completed.
6. When the system is completed, go back and properly tighten all bolts.
7. **Curtains** can be attached to horizontal rails with self-tapping screws, hooks, wire ties or similar methods.

**Strip curtains** should be attached by bolting the MB14 mounting bracket to the rails with the self tapping screws. After the MB14 is installed, strips can be hung with the appropriate overlap.


8. If any questions or problems arise during installation of the **SAF-T-CELL**, please call your Frommelt Safety Products representative or our factory.

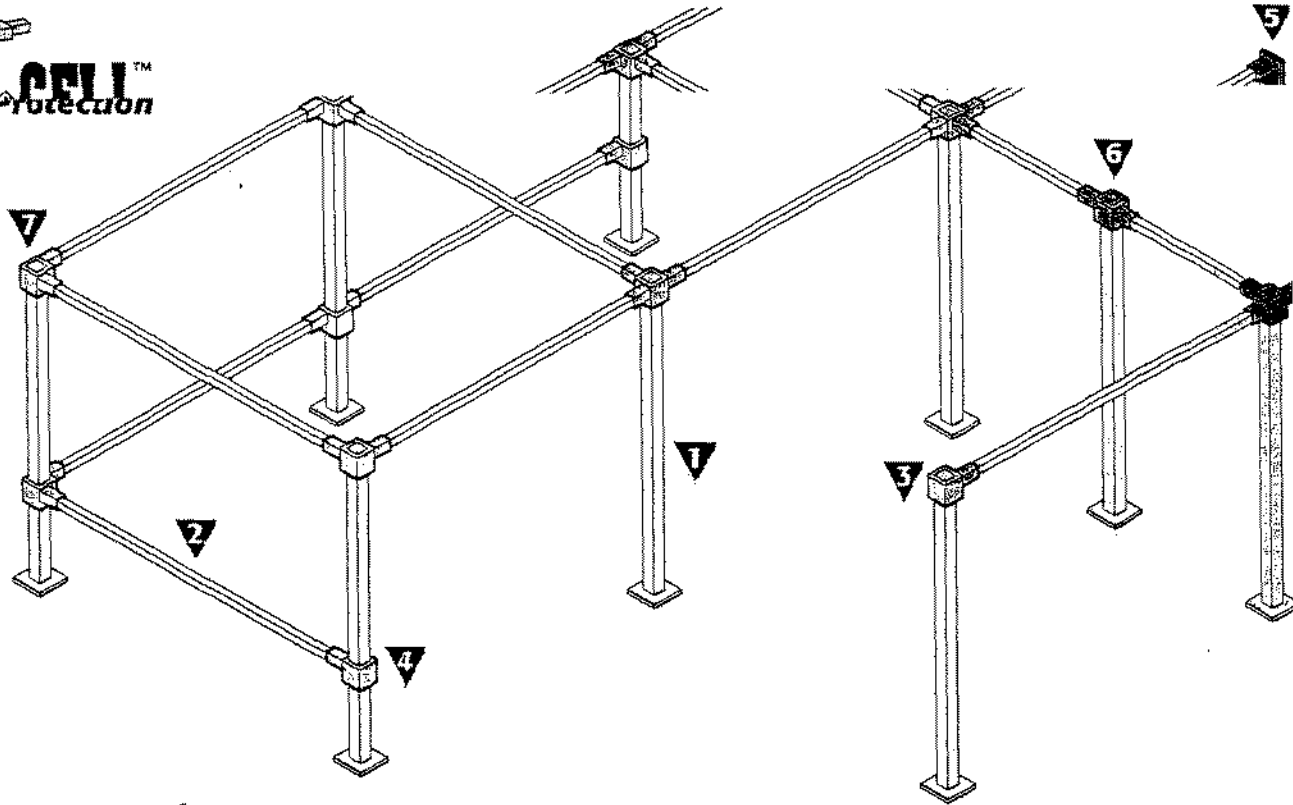

**Versatile Components for Custom Systems**

A variety of couplers are available for tailoring Saf-T-Cell framework to your unique floor plan.\* 3" x 3" tubular columns in 8', 9' and 10' heights are combined with 12-gauge horizontal rails up to 10' long to provide support for traditional and powered strips or curtains. Optional middle rails serve as additional safety barriers.

\*If your application requires custom components, consult a Frommelt Safety Products representative.

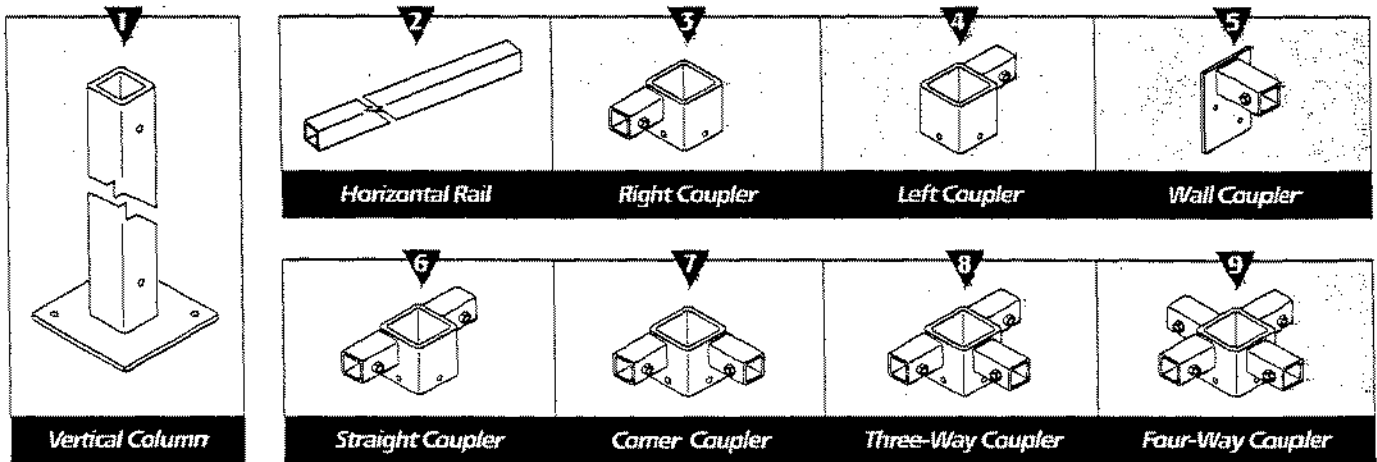

**Count on the Area Protection Experts**

For a single curtain or a departmental system, give Frommelt Safety a call. Our engineers can suggest the traditional or automated curtains that will best serve your needs. Then we'll design a Saf-T-Cell system with components customized to your specific floor plan, equipment and processes.



4343 Chavenelle Drive  
Dubuque, Iowa 52002-2654  
Toll Free: 800-553-5560

<http://www.ritehite.com>

